


LEDERER MOTORS

WIRING MSD IGNITION

With all of the components mounted and the battery charged, connect the wiring as shown below.

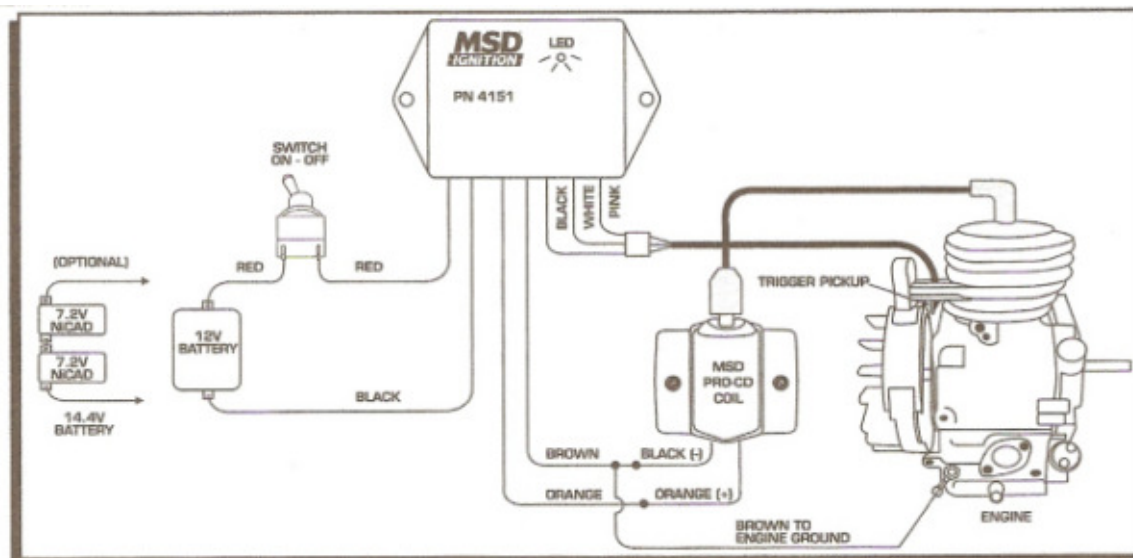

1. The PINK, BLACK and WHITE wires connect to the weather-tight connector coming from the trigger pickup.
2. Connect the BROWN wire to the coil negative (BLACK) wire.
3. Connect the ORANGE wire to the coil positive (ORANGE) wire.
4. Connect the RED wire from the On/Off switch, to the battery positive terminal.
5. Connect the BLACK wire to battery ground.
6. The BROWN jumper should be connected to the coil negative (BROWN) wire and engine ground.